

Quick Start Guide for initial Wireless Control Pad Setup

1. Using the Configurator software, assign a zone for each of the Wireless Control Pads being used. This should be a zone that is not assigned to a zone intended for use with speakers. For instance, Zones 17-20, or Zone 9 and above in an 8 zone system. Check the **Using NV-WCP Wireless Control Pad** box on the "System Settings" tab. Download the configuration to your system. **Note that the WCP requires the E6G and I8G Configurator version 2.52 or higher.**
2. Determine the best location for the Coordinator. For best performance it should be placed vertically on a wall. Avoid metal surfaces that could interfere with the Coordinator's communication. Typically, the Coordinator is placed in the same location as the NuVo System and the related source equipment. However, in some instances it may perform better if it is placed in a central location in the home. The CAT5 connection to the NuVo System's EZ Port or Allport can extended up to 150 feet.
3. Install the Coordinator by plugging it into the NuVo System EZ Port or Allport via a CAT5 cable. The NuVo System should be plugged in and powered on. This will supply power to the Coordinator. Make sure the rotary switch on the coordinator is set between 1 and 4. Press and hold the SETUP button until the green LED flashes rapidly. The press and hold function is only necessary for initial installation. This step is bypassed if you are adding additional Wireless Control Pads to the system.
4. Once the Coordinator is installed and the NuVo System is configured, power on the Wireless Control Pad by connecting the battery. The initial display will ask you to "Enable" or "Disable" the **Zone** button. If it does not ask this, Restore Factory Defaults on the WCP, see **Section V. Restore Factory Defaults**, pg. 17. Choose "Enable" to allow the Wireless Control Pad to control any zone within the system. Choosing "Disable" will tie the WCP to single zone control.

Quick Start Guide for initial Wireless Control Pad Setup

5. Once the Zone button selection is made, the Wireless Control Pad will try to establish communication with the Coordinator. "Searching for Coordinator" will be displayed.
6. When communication is established, the message "Press SETUP Button on coordinator...Then Press OK" will appear on the display. Follow the instructions by pressing the **SETUP** button on the Coordinator followed by the **OK** button on the Wireless Control Pad. When communication is complete, you will see a list of the available zones in the system appear on the display. Select the ZONE number that you reserved for the WCP in the configuration.

At this point, your Wireless Control Pad System is fully functional and able to control any zone in your NuVo System.